




Polaroid PMID4312 Motherboard Replacement

This guide will cover the steps required to remove the motherboard from a Polaroid PMID4312 tablet.

Written By: Christopher Bertan

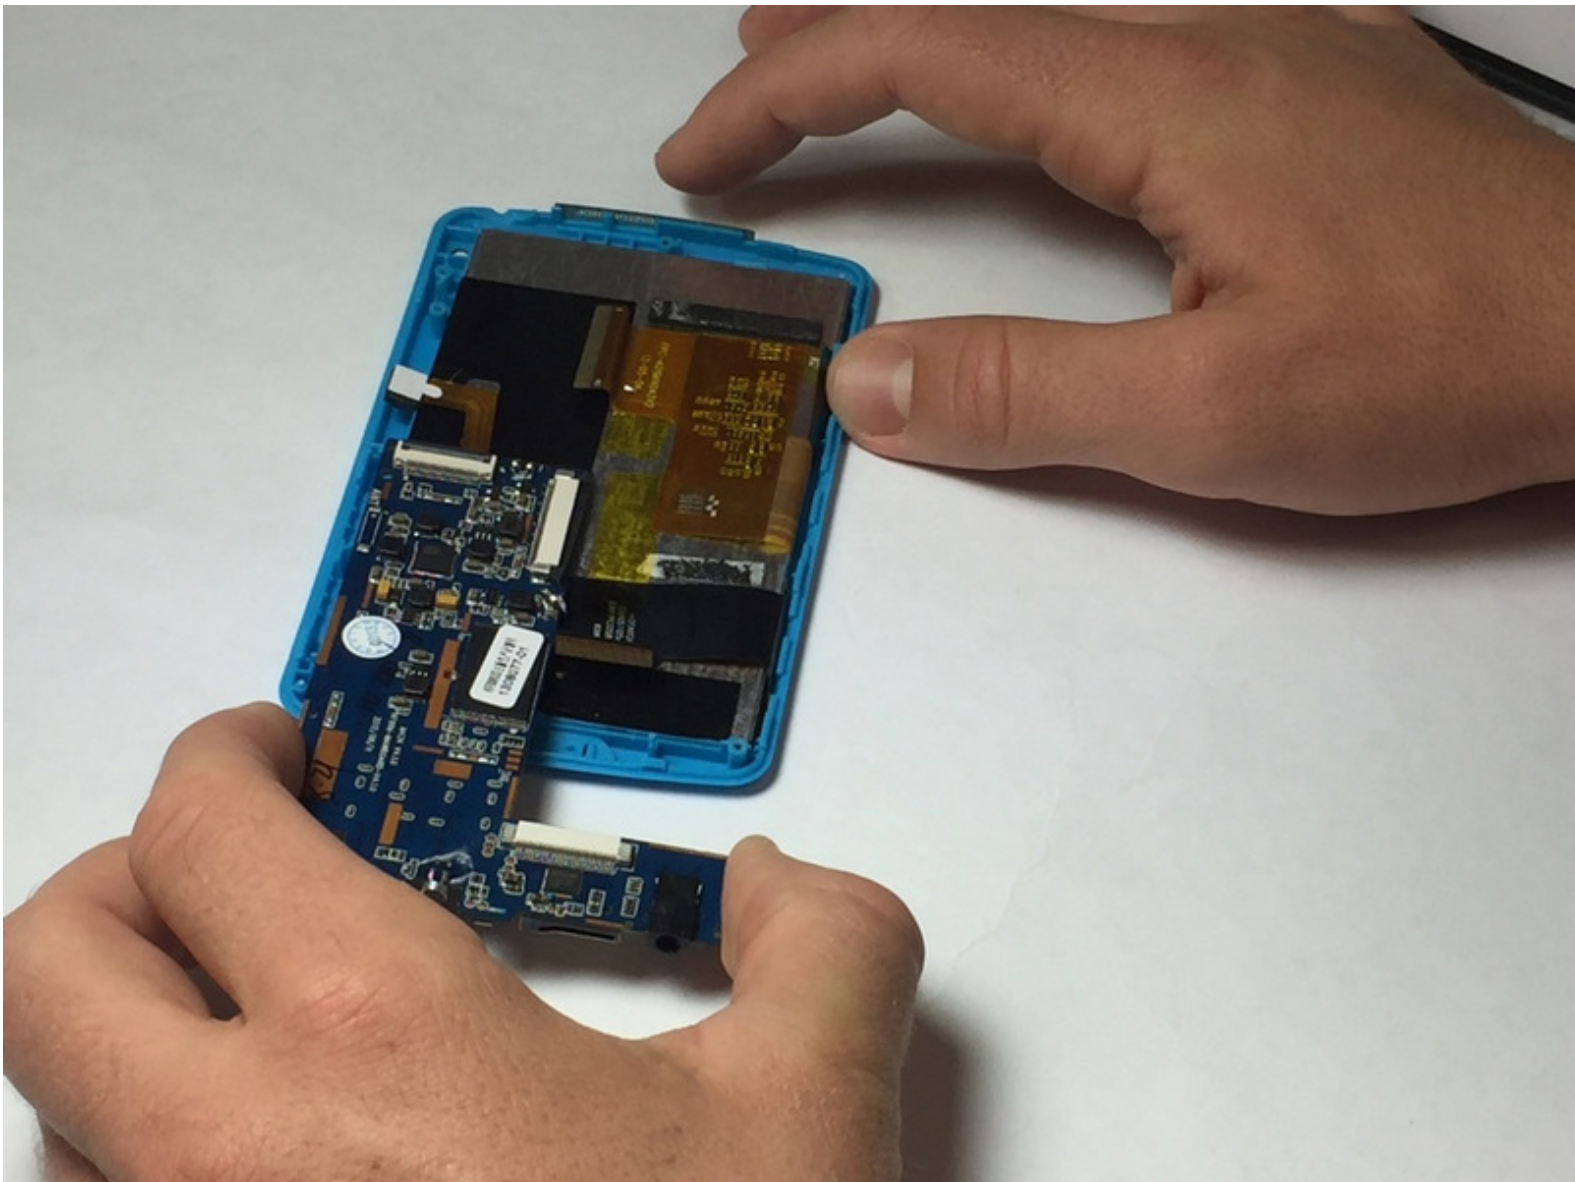

INTRODUCTION

The motherboard contains most of the electrical components of the device. It is a delicate piece of hardware but can easily be removed.



TOOLS:

- [Plastic Cards](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Soldering Station](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Pry the seam between the screen and the case and slide it on all four sides with a large plastic opening tool until the plastic case comes off.

Step 2




- Lift the device off of the case and flip over the device so that it sits screen side down.

Step 3




- The device is now free from the plastic case.

Step 4

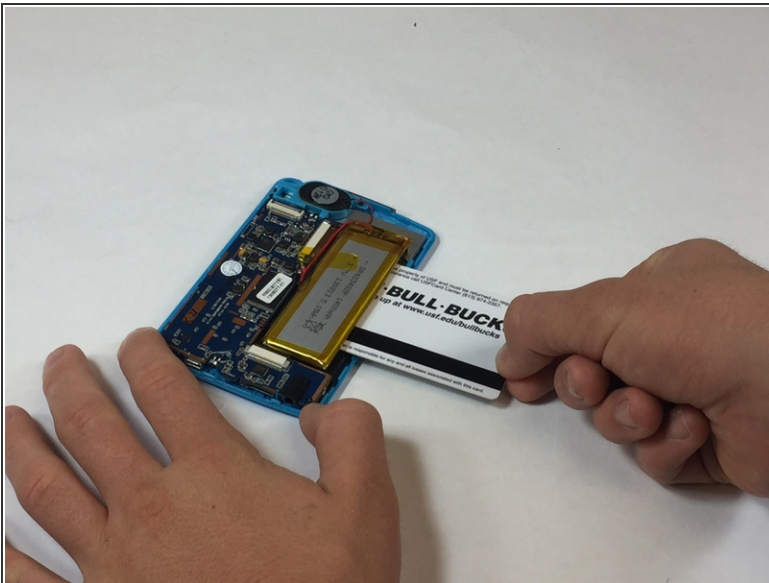


- Wedge a plastic card beneath the battery unit and wiggle the card side to side and up and down gently until the glue sealing the battery to the device is broken.

Step 5

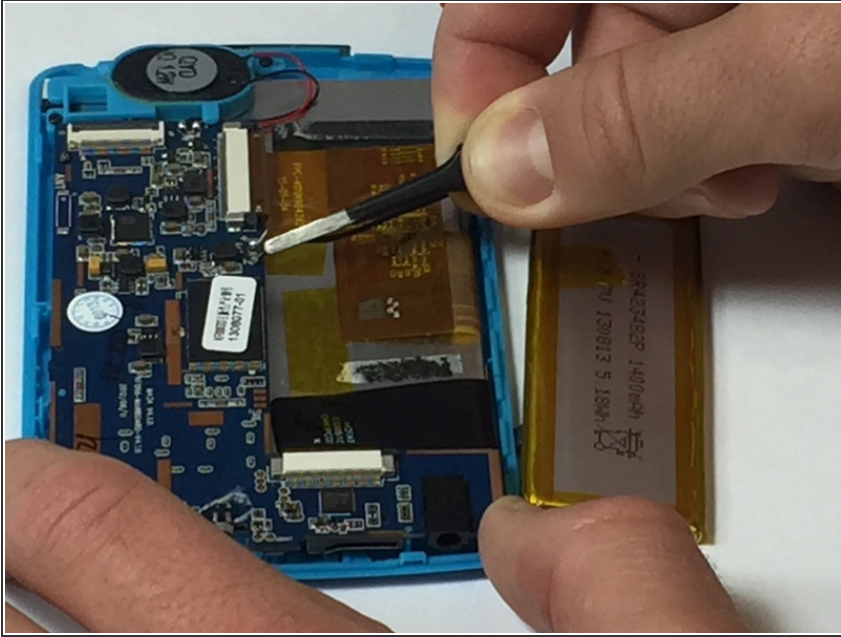



- Peel back any yellow tape not directly attached to the battery.
- Using a soldering iron, desolder the two wires that connect the battery to the motherboard.

Step 6 — Speaker

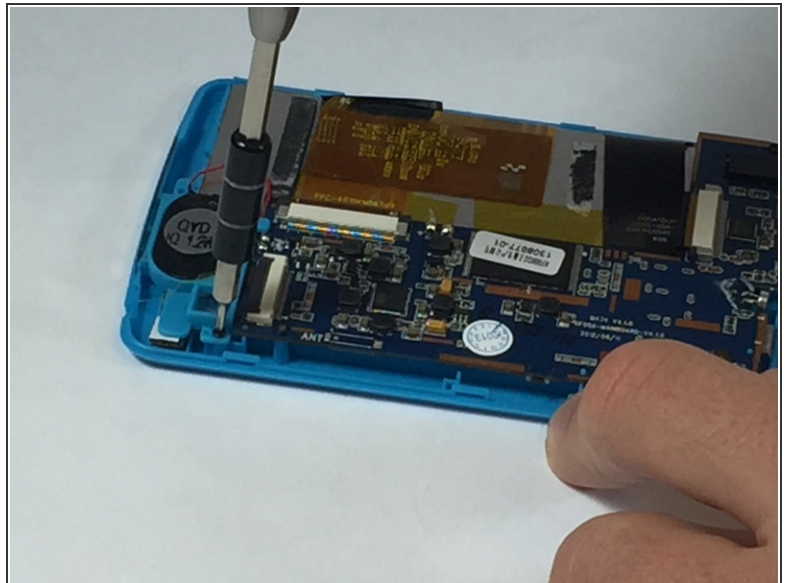


- Remove the two 5mm screws attached to the top right and bottom left corners of the speaker

Step 7

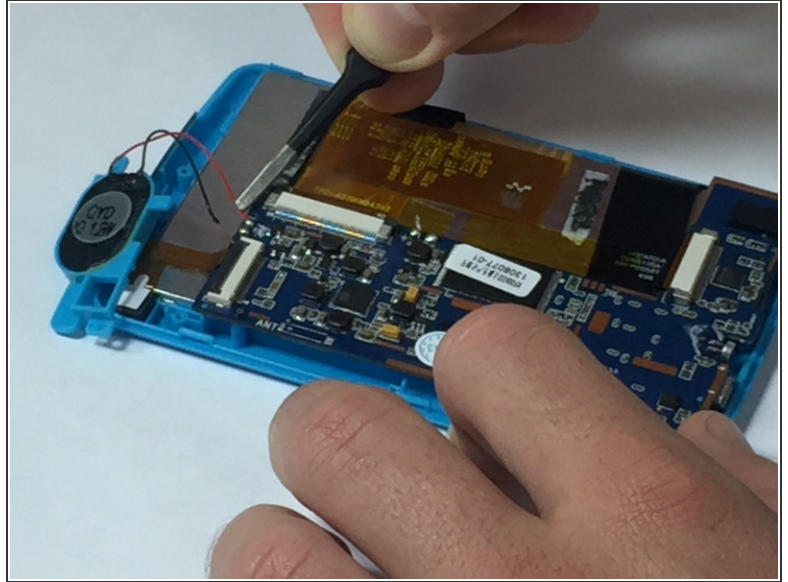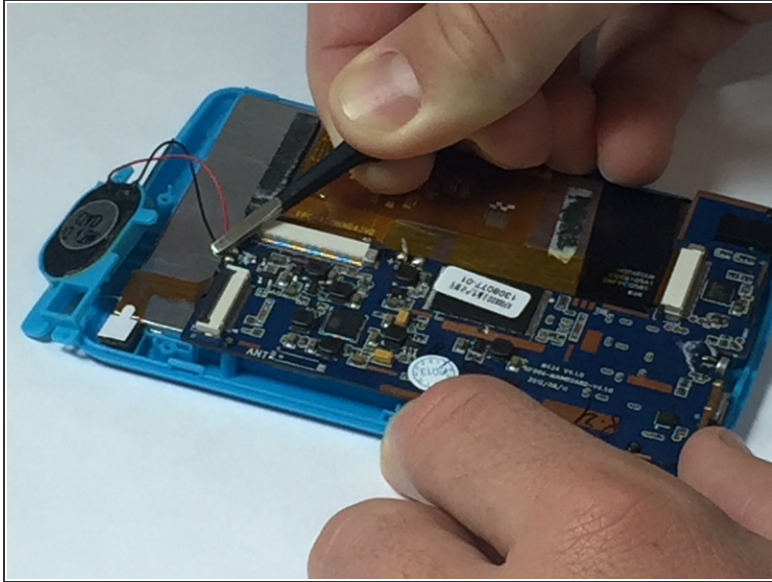



- Solder off the wires connecting the speaker to the device

Step 8

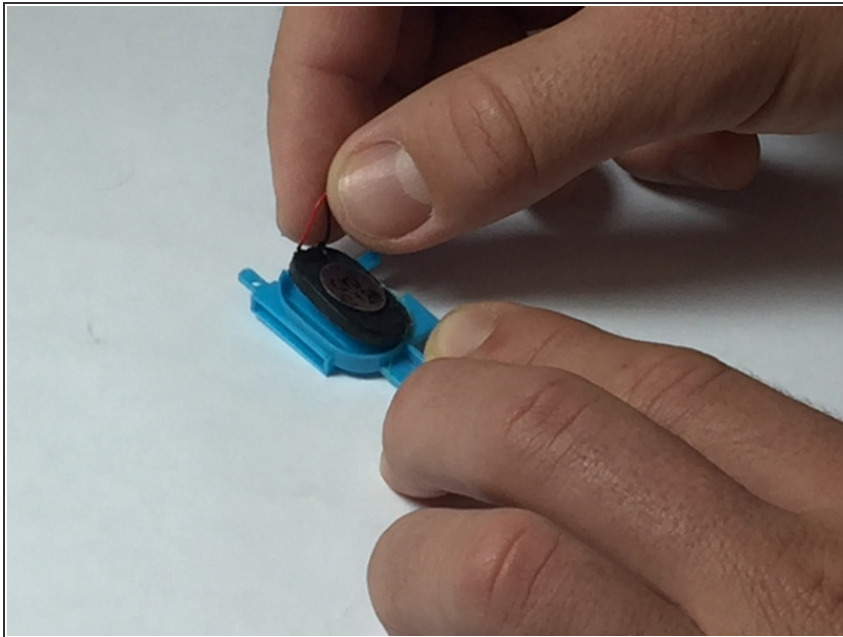



- Pull the speaker out of the casing to release it.

Step 9 — Motherboard

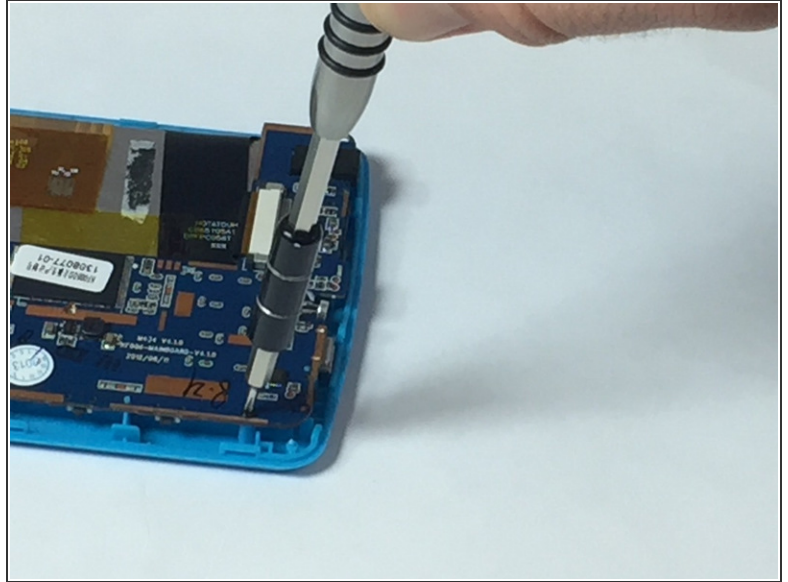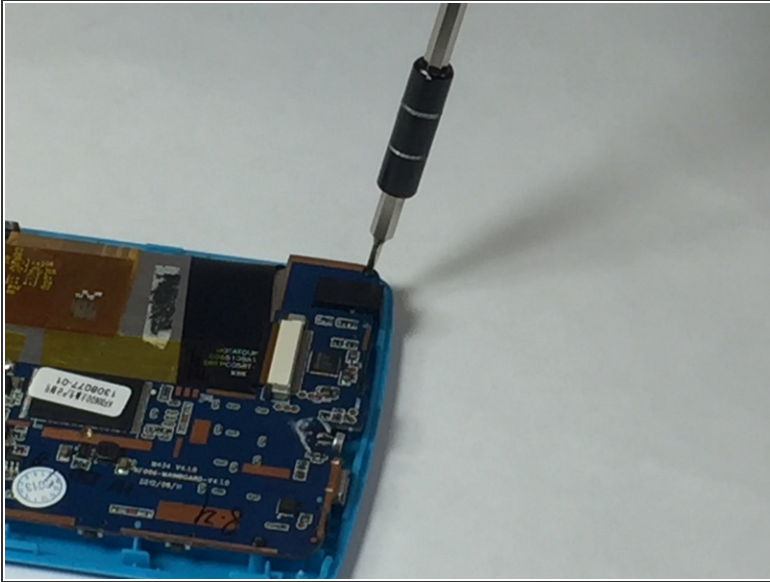



- Using the ph#00 screwdriver, remove the four 5mm screws connecting the motherboard to the casing.

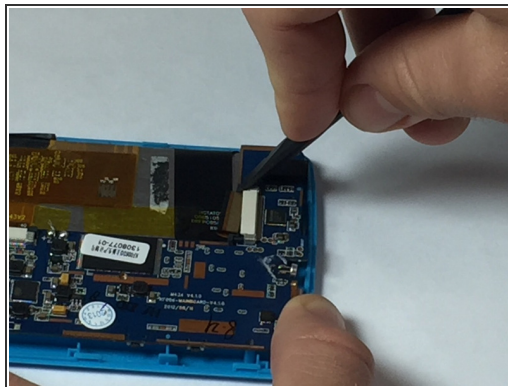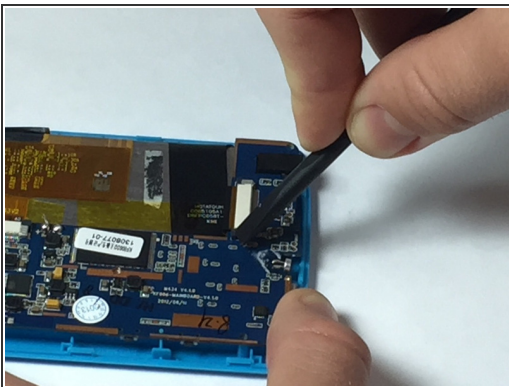Step 10




- Using a spudger or a fingernail, detach the two ribbons from the motherboard by pushing the plastic tab away from the Zero Insertion Force connectors.

 As the name implies, no force is needed to plug in or remove the cable.

 Be sure you are prying the plastic tabs connected tab and not the connector itself.

Step 11

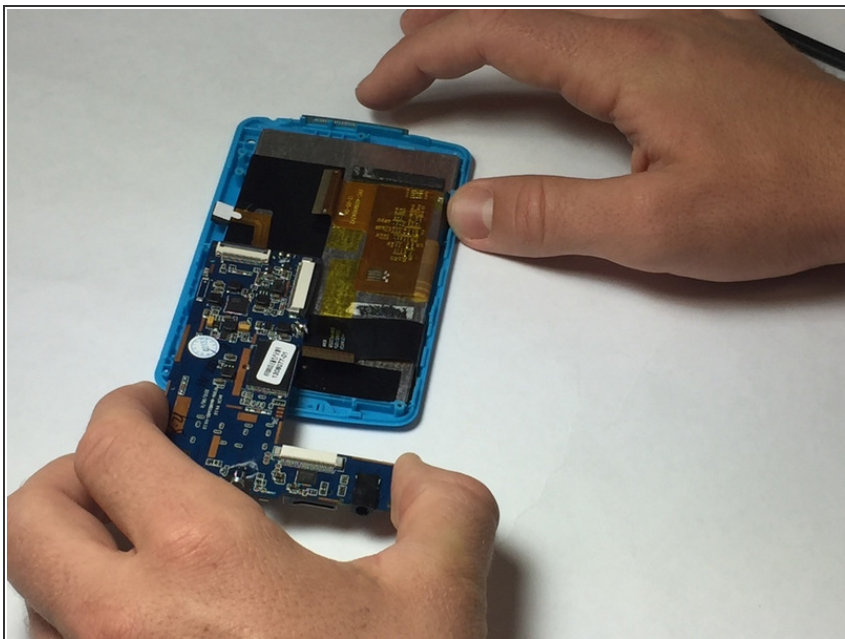

- Now carefully remove the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 11:21:27 AM.